






















Deco Cutlery Set
























Description

The Decò cutlery set in silver or silver-plated alpaca results from combining the style of the 20s and up-to-the-minute taste. The sinuous, decisive lines make its design extremely up-to-date and original. The perfectly balanced weight of the cutlery ensures very easy handling. Made and hand-finished in Italy.

Deco

	Table Fork 8"1/4		Fruit Fork 6"5/8
	Table Knife 9"7/8		Fruit Knife 8"1/4
	Table Spoon 7"7/8		Fruit Spoon 7"
	Steak Knife 8"1/4		Ice-Cream Spoon 5"1/8
	Soup Spoon 7"		Tea Spoon 5"1/8
	Fish Fork 7"		Coffee Spoon (Large) 4"3/8
	Fish Knife 8"1/4		Coffee Spoon (Small) 4"
	Lobster Fork 7"1/2		Cheese Knife 8"1/4
	Shellfish Knife 7"		Grated Cheese Spoon 4"3/4
	Dessert Fork 5"1/2		Parmesan Cheese Fork 5"7/8
	Dessert Knife 6"1/4		Parmesan Cheese Knife 5"7/8

Deco

	Soft Cheese Knife 9"		Cake Server 10"5/8
	Parmesan Cheese Slicer 8"1/4		Cake Server Knife 11"
	Parmesan Cheese Grater 9"		Salad Serving Fork 9"
	Serving Fork 9"7/8		Salad Serving Spoon 9"
	Serving Spoon 9"7/8		Bread Knife 11"3/8
	Rice Serving Spoon 11"3/8		Carving Knife 12"1/4
	Spaghetti Serving Spoon 12"5/8		Carving Fork 9"7/8
	Ladle 12"1/4		Poultry Sheers 10"1/4
	Lasagna Server 11"7/8		Sauce Ladle 5"7/8
	Fish Serving Fork 10"1/4		Spaghetti Tongs 9"
	Fish Serving Knife 11"		Bread Tongs 9"

Deco



Butter Knife
6"5/8



Ice-Cream Serving Spoon
7"7/8



Bottle Opener
5"7/8



Lemon Peeler
7"1/2



Champagne Tongs
7"



Lobster Tongs
9"



Nut Cracker
6"5/8



Pizza Cutter
7"7/8



DISHWASHER
except cutlery with
parts in natural horn



use a delicate cycle max. 40° to 45°
with a mild detergent that does
not contain chlorine/additives



dry with a soft cloth



BY HAND



use a soft non-abrasive sponge
and mild detergent



rinse carefully



dry with a soft cloth